




RHINO[™]
Sound Control

FIIC 70
TESTED WITHOUT A
SUSPENDED CEILING

Approved Assembly for High-Rise Residential Buildings & Condos with Concrete Floors

1. Make sure the subfloor is clean, flat, and dry.
2. RHINO Sound Control FIIC 70 seams must be placed tightly together and taped with duct tape.
3. When installing floating floors (laminates, engineered hardwood or luxury vinyl plank) RHINO FIIC 70 is loose laid, not glued to subfloor.
4. When installing glue down engineered hardwood floors glue RHINO Sound Control FIIC 70 to the subfloor with a premium polyurethane adhesive, use the same polyurethane adhesive to glue the engineered flooring to RHINO Sound Control FIIC 70.

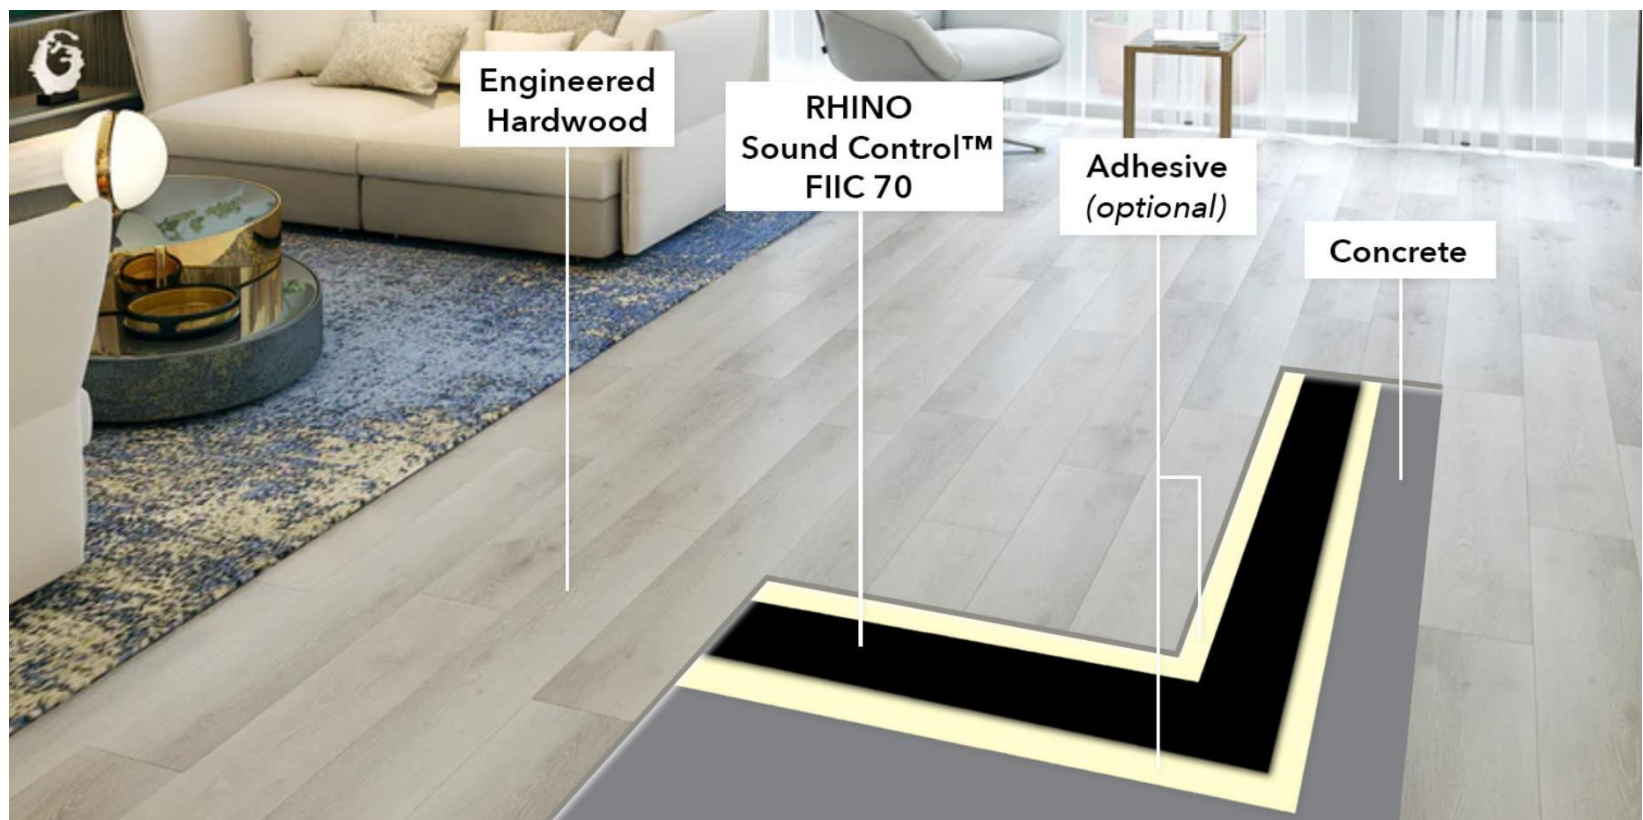

WARRANTY

- RHINO Sound Control acoustical membranes are warranted to retain their essential firmness, resilience, and porosity through the useful life of the floor covering under which they are installed.
- This warranty only applies to RHINO Sound Control approved indoor installations.
- In the event of a confirmed product failure due to defective manufacturing, the company will replace, without charge, the defective portion of the underlayment with a new equivalent product.
- This warranty is valid only when the product is used in accordance with our instructions and for its intended purpose and does not cover defects or failures due to inappropriate use or abuse.
- RHINO Sound Control does warrant its product from the passage or transfer of all airborne and impact sounds.